



### CanaTrans® Warranty

Lentequip warrants the CanaTrans® for a period of one year from date of purchase when used under normal operating conditions. Lentequip's warranty terms are available at [lentequip.com](http://lentequip.com) in our Terms and Conditions document. Any unauthorized disassembly of the CanaTrans® or removal of the silver foil tamper-proof label found to the right of the power input connector immediately voids the warranty. If you have any questions regarding the proper operation of the CanaTrans®, please contact Lentequip. Specifications are subject to change without notice.

In the unlikely event that your transmitter requires servicing, contact Lentequip for instructions before shipping the unit.



1365 Morningside Avenue  
Unit #5  
Toronto, Ontario M1B 4Y5 Canada  
Tel: 416.406.2442

[www.lentequip.com](http://www.lentequip.com)



Please read before using!



## Introduction

Thank you for purchasing the CanaTrans®! This specialized unit integrates outstanding electronic and mechanical engineering along with robotic circuit assembly to give you state-of-the-art performance for your uncompromising production requirements. Many years of research and development have yielded this transmitter that sets a new and long-awaited standard for the film and video industry.


Each feature will be described in detail to allow you to best set-up the unit to your personal preference. A quick reference guide is also provided to give you an overview of the menu structure.

**The use of this product is strictly governed by the Terms and Condition of Sale provided by Lentequip and is available on our website at [lentequip.com](http://lentequip.com).**

### Key Features and Benefits

- Microprocessor-based technology means reliability and upgradability;
- State-Of-The-Art design using latest RF components;
- Surface mount technology used throughout for miniaturization (and believe us that it is very small inside!);
- Flat membrane switch panel means improved reliability over conventional mechanical switches;
- Quality proven Fischer input connectors, industry standard;
- ARRI compatible IVS input, industry adopted standard;
- Wide DC input operation on a single input, 12-30VDC coupled with rugged internal power supply for long-term reliability;
- Smart voltage circuitry, 24V or 12V auto detection;
- Independently adjustable low battery warning for 24V and 12V systems;
- 1W maximum RF output (higher than any other UHF transmitter) transmits over 1000 feet line of sight when accompanied with

## CanaTrans® Menu Guide

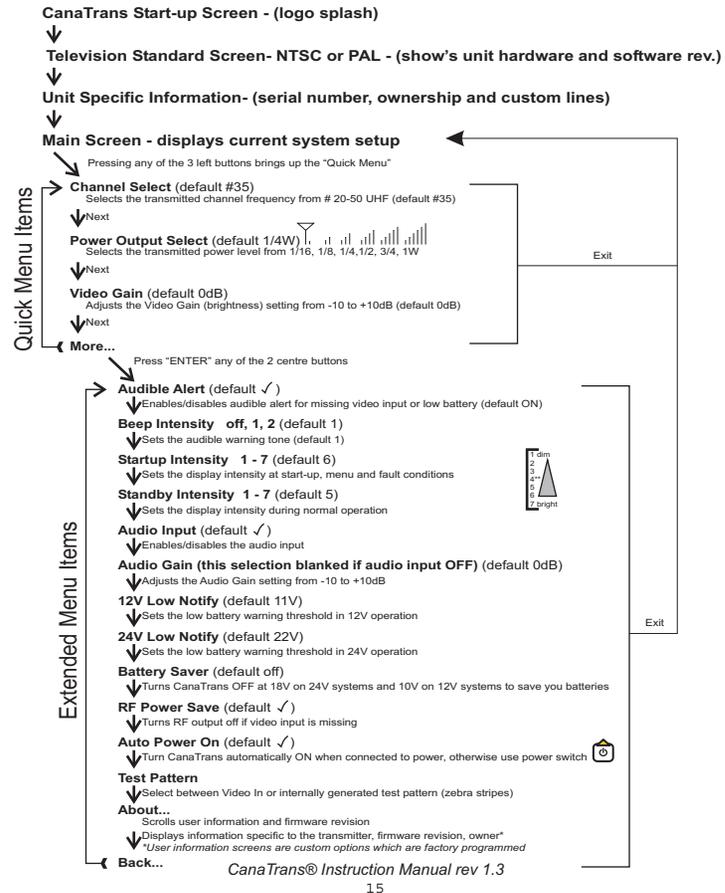



### **CanaTrans® Accessories**

For a complete list of available cables and accessories for the CanaTrans, please visit [www.lentequip.com](http://www.lentequip.com). We maintain the site on a regular basis. If your cable is not listed, please contact us.



- high gain flag antennas;
- Unit designed and tuned to operate on selected channels, 20-50 UHF;
- All power levels are calibrated on all channels (186 discrete adjustments) made by automated means using high-end test equipment and automated proprietary algorithms;
- 6 levels of adjustable output power! No RF pads required - means less heat generated in unit!;
- BNC video input and combined power & video input connection;
- Video absent detection to facilitate the troubleshooting of bad cables or missing video input;
- Adjustable video gain +/- 10dB. Helps compensate for varying video tap levels without having to change iris setting;
- Integrated video test pattern, helps troubleshoot video chain;
- Line level audio input, mono;
- Adjustable audio gain +/- 10dB. Helps fine tune audio levels;
- Graphical menu display interface, a transmitter first! Facilitates user operation and provides easy to understand setup;
- Variable screen intensity, 7 steps, suitable viewing in direct sunlight;
- Keystroke feedback, adjustable tone;
- Factory customizable ownership screen (optional) - theft deterrent feature;
- Innovative packaging, compliments high-tech cameras;
- Designed "Rental House Tough";





- Novel universal mounting plate included;
- Modular electronic construction means increased reliability;
- Electronics assembled at ISO 9001 facility;
- Unparalleled customer support and service.

#### General notes to the new firmware release - Rev: 1.x

Since the introduction of the CanaTrans®, Lentequip has received constructive comments from users around the world. These comments were directed at making an already great transmitter even better. At Lentequip we rely on customer input to deliver great working products for film and video production professionals. Some of the new software highlights include:




- An increase of usable UHF channels from 20 to 50 (31 channels) with the ability to wrap around from channel 20 to 50;
- A new push and hold feature to increase channels and video gain rapidly;
- Easier to navigate user interface;
- Quick access to the most often used adjustments - channel, power and video gain selection - this is the *Quick Menu*;
- Redesign of the Standby Screen layout to be more informative, i.e. all *Quick Menu* settings are constantly viewable during the operation of the CanaTrans®. The battery voltage has been permanently added to the display to give you continuous readings;
- Included new graphical battery icon to display the relative amount of charge remaining in the battery;
- A fivefold rate increase to the presence or absence of incoming video signal detection;
- New easier to interpret "check marks" for enabled features;



Use only one video input at a time, either the one through the 4 pin Fischer connector or the BNC connector - **never both**.

Remember that the best transmitter in the world is not good without an equally well-matched receiver. If your transmitter is functioning correctly but your image is poor, check the receiver. We have seen many problems that were receiver based.

You will NOT damage the CanaTrans® if it is powered without its antenna connected, however, a poorly transmitted image is the result. Ensure that you are using the supplied CanaTrans® antenna(s) at all times. It is a custom part and is an integral part of the transmission circuit. No substitutes are approved by Lentequip. The CanaTrans® antenna is installed by turning the knurled ring at the base of the antenna and then further tightening (not too tight!) to lock the antenna at the desired angle. Keep the antenna vertical at all times (i.e. perpendicular to the ground).

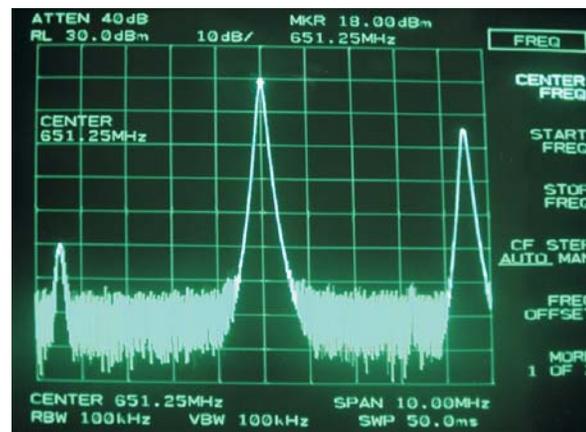




### Practical Tips for Using the CanaTrans®

Always ensure that you are using the **LEAST** amount of power to give you the best reception results. Start at 1/16W (single bar antenna icon) and work your way up from there as conditions dictate. Small rooms require little power - long outdoor transmissions require more. Experience that will allow you to make good power judgements based on your environment.

More power is **NOT** always better! This latter point can not be emphasized enough. Too much power in a small room, for example, can overload many receivers, giving you poor image quality and creating unwanted reflections or intermodulation within your working environment. **Never transmit on an occupied channel.**

Check for a clear channel before powering-up the CanaTrans®.

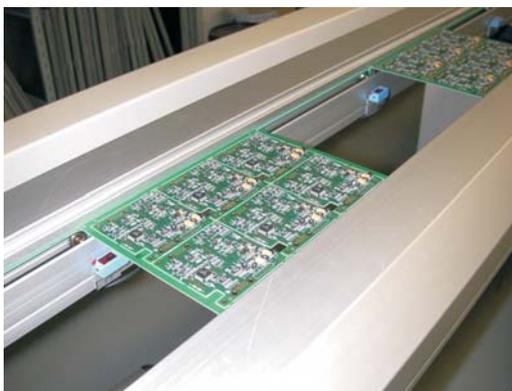

Production View of CanaTrans®



- New written alerts for missing video, this can be coupled with an associated audible alert;
- A new "beating heart" icon to indicate proper operation of the CanaTrans® processor circuitry;
- A new "transmit power" icon with scalable bars to indicate the selected output power;
- A new auto power-down message has been added if the CanaTrans® turns off due to low battery voltage (Battery Saver must be Enabled);
- Factory reset confirmation is now shown on the screen when initiated;
- Field programmable updates are now possible without sending the CanaTrans® back to Lentequip. A special communication cable is required for this feature.

### Using the Menu

(also refer to the menu tree located further on in this instruction manual)

The CanaTrans® is equipped with 4 soft switches with yellow triangles pointing towards the display. These switches are of highest quality and are rated for thousands of cycles. Never dig your nails or other sharp objects into the membrane switches! The switches are named 1 through 4 starting at the far left of the unit when viewed face-on. Switch 4, which is also printed with the international power symbol, is used to turn the unit on or off depending on the setting of the Auto On function selected in the Menu.

Accessing the menu is as simple as pressing any of the buttons, 1 through 4. The CanaTrans® menu has been designed to provide you with a quick and intuitive means of accessing the many features of the transmitter. The most commonly used features such as changing the channel, power levels and video gain are grouped together and comprise the *Quick Menu*. You can also quickly jump to the main menu after power-on by briefly pushing button 4.





## Navigating the Menus

Navigating the menu is done by using the 4 switches below the graphics screen. These are referred to as soft-switches and their function changes based on the graphical label above them. To change the channel, for example, push any of the left-most three switches, then increment the channel with the + or - key. Holding down the selection button will increase the selection speed. Selecting "Next" advances you to the subsequent item. Selecting "More" advances you to the Extended Menu where more finite adjustments or settings can be made. The continuous selection of "Next" brings you back to the top of either the Quick Menu or More menu items, depending on your place within the menu.


**Note: If 15 seconds have elapsed since the last key press within the Menu, the transmitter will automatically return to the standby screen.**

## Resetting the Menus to Factory Default

To return the CanaTrans to its factory default setting, do the following:

1. Unplug the CanaTrans®
2. Hold down switch #1 (do not let go!)
3. Power-up the CanaTrans® (Depending on the last setting of the Power On feature, either plug in the power cable or push the ON switch.)
4. **\*\*Factory Reset\*\*** is shown on display
5. Release button #1

Factory reset conditions are now returned to all menu items.

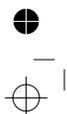

## Power/Video Connection to the CanaTrans®

The pinouts of the connectors used on the CanaTrans® are labelled right on the unit for your convenience. The power/video input combination has been standardized on the ARRI IVS scheme. Cables are available from Lentequip.

Pin 1	DCGround
Pin 2	Video Ground (the CanaTrans® keeps grounds isolated!)
Pin 3	Video Input, 1V p-p
Pin 4	12-30VDC

The mating Fischer connector to the CanaTrans® power input is a S102 A053-130+ and can be ordered through Lentequip.

## Audio connection to the CanaTrans®

The CanaTrans® will accept a line-level mono audio input and will transmit incoming audio over the same selected UHF channel.

Pin 1	Audio Ground
Pin 2	Audio IN

The mating Fischer connector to the CanaTrans® audio input is a S102 A051-130+ and can be ordered through Lentequip.

## Use and Care of your CanaTrans®

Please remember that the CanaTrans® is a rugged, yet delicate device. Treat it with care and it will serve you well for a long time to come. Avoid severe impacts as this may damage the display. Never overtighten the antenna connector. Never dig your nails or other sharp objects into the membrane switches! Avoid exposing the CanaTrans to excessive moisture or rain. Contact Lentequip for answers to any user specific questions.





#### RF Power Save:

When this feature is enabled and the video absent circuitry indicates that there is no live video at the input (indicated by **\*NO VIDEO\*** on the display) then non-essential transmitting circuitry is disabled to conserve power. The lack of transmission is clearly recognized by a snowy picture at the receiving monitor. If this feature were turned off then instead of a snowy picture at the receiving monitor you would see a black screen indicating the presence of an RF carrier. If this feature were turned off, you would see a black screen at the receiving monitor (indicating the presence of an RF carrier), instead of a snowy picture. This feature is by default on. If you are using tuners that continuously scan for the presence of a channel, then you may wish to keep this selection disabled.

#### Auto Power On:

When enabled, the CanaTrans® will turn on when a live power connector is inserted into the unit. When disabled, the ON switch must be pressed. This is the right-most switch on the face of the CanaTrans®. This switch can also be used to turn the transmitter OFF by pressing and holding the button.

#### Test Pattern:

A unique zebra test pattern can be generated by enabling this feature. The benefits are that you can transmit a signal without having live video available. Two white stripes will appear on the monitor when enabled. Note: Some receivers do not properly lock onto this internally synthesized test pattern. Again, receivers like the Sony TU-1041U will display this zebra pattern correctly.

#### About:


In the "About" menu you can review the serial number, hardware and firmware version as well any custom programmed fields requested at the time of purchase.

#### Back:

Selecting "Back" takes you to the Quick Menu without completely exiting the menu tree.



#### The Quick Menu

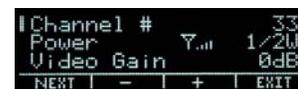

#### Channel Select:

This selection allows you to choose any of the 31 available transmitting channels from 20 to 50 UHF. Holding the + or - button down accelerates the selection. The channels freely loop around from 20 to 50 and vice versa. Only transmit on a non-occupied channel! Check for a good channel with either the transmitter switched off or its power level turned OFF as described below. A vacant or usable channel is seen at the receiving monitor as a snowy picture. **For best performance, use the antenna with the red cap for channels 20 to 35 and the yellow one for channels 35 to 50.**

#### Power:

This feature allows you to select any of the 6 transmission power levels: 1/16, 1/8, 1/4, 1/2, 3/4 or 1W, including OFF. Here again the power levels freely loop around. The CanaTrans® does not need the use of RF pads or RF attenuators! Do not install any on this unit. Instead use the power level adjustments to make this type of change.

#### Video Gain:

The CanaTrans® is most unique as it allows the user to compensate for varying video levels right at the transmitter without changing your video tap iris setting. With the Video Gain feature you can amplify (increase) or attenuate (decrease) your video level by +/- 10dBs. 0dB is the default factory setting. By changing the gain setting you are able to brighten or darken your transmitted picture.

*Note: There are some TV receivers that will block attempts from transmitters to boost the video signal levels. Receivers commonly found in our industry such as the Sony TU-1041U series will allow for video gain compensation as transmitted by the CanaTrans®.*





## The More Menu

### **Audible Alert:**

This setting will enable or disable the buzzer from making a sound when either the video input is missing or when the battery is low as set by the 12V or 24V Low Notify setting. The default setting is ON as indicated by the check mark. If you do not want audible alerts deselect this feature. Audible alerts are active when the musical note icon is present next to the beating heart.

### **Beep Intensity:**

With this setting you can vary the sound of the keystroke feedback coming from the CanaTrans®. Two different sound options are available, 1 & 2, including the option of completely turning it off, setting 0.

### **Startup Intensity:**


Here you can set the display's start-up intensity. Any alerts requiring the operator's intervention (i.e. missing video or a low battery condition) is also associated with the same start-up screen intensity. For instance, if you have set a standby intensity of 2 (which is low) and you lose your video input signal, the CanaTrans® screen will switch to the start-up screen intensity setting until the video signal is returned. The same applies for a low battery condition. Accessing the menu will also force the CanaTrans® to revert to the start-up intensity.

### **Standby Intensity:**

Under normal operation this is where you would set your preferred screen intensity from 0 to 7. Note: A screen setting of 0 will effectively turn the display OFF until an error condition occurs or the menu is being accessed, whereby the unit will revert to the start-up intensity described above.

### **Audio Input:**

This setting allows you to turn the CanaTrans® audio input on or off.

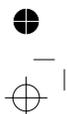

### **Audio Gain:**

Similar to the video gain feature as described above, changes in the audio level can be adjusted here. 0dB is the default setting.

### **12V Low Notify:**

The CanaTrans® continuously monitors the incoming battery voltage with a high degree of precision and displays the voltage on the screen next to the battery icon. You can set your preferred battery low warning threshold at this menu item. Voltage threshold selection can be made from 10V to 12V in 200mV increments. Once this threshold is reached the battery icon will flash and depending on your Audible Alert selection it will be accompanied by a warning tone.

### **24V Low Notify:**

Similarly to the 12V Low Notify described above, the user can set the desired threshold for operation on 24V equipment from 20V to 24V again in 200mV increments. Once this threshold is reached the battery icon will flash and depending on your Audible Alert selection it will be accompanied by a warning tone.

### **Battery Saver:**

The CanaTrans® is also unique in being able to identify the incoming power standard: either a 12V or 24V source. Based on the voltage measurement during the power-up sequence, the CanaTrans® will emulate a 12V or 24V piece of equipment. The big advantage is that the CanaTrans® can disconnect itself from the power source so that it will not drain your batteries to a deep discharge level should the unit remain powered and unattended (the CanaTrans® can operate down to 9V!). If the Battery Saver feature is enabled (shown by means of a check mark) then the transmitter will shut itself down at 18V (in 24V mode) or at 10V (in 12V mode). A brief message will appear on the screen confirming the reason for a shutdown. Once this shutdown occurs, restarting the CanaTrans® can only be accomplished by means of a power cycle (i.e. removing the input power connector and re-inserting it with what should be a charged battery).

